

BLASTER MINI

WIRELESS SPEAKER



Package Includes:

- 1x Blaster Mini
- 1x User Manual
- 1x Charging cable
- 1x Audio cable

Cautions

- (1) Please do not open the unit or replace any component, please follow the operations in user manual
- (2) Please do not operate the unit in the water or any other liquid, the unit is NOT water proof.
- (3) Please do not operate the unit if any water or liquid are being splashed into it, it may cause a fire or electrical shock
- (4) Please do not expose the product to heat source or fire directly
- (5) Please do not put the unit close to magnet field,

Specifications:

Bluetooth version: 3.0 +EDR
Battery capacity: 400mAh
Transmission distance: 10m
Rated Power: 3W
Play Time: 4-6 Hours
S/N: 80db

Warning

Do choose adapter from regular manufacturer.
Do charge the speaker if it will not be used for a long time (over 3 months)

ENGLISH

Bluetooth Connection

1. Turn ON/OFF Button to ON, speaker will enter into default bluetooth mode, the front LED light will flash. After the LED flashes quickly for 2 seconds, the products will enter pairing mode. Search for "iDance BM1 for pairing. After pairing, the LED light will flash slowly.
2. Press play/pause (⏮), the music is paused.
Short press (->) to play the previous song.
Long press (->) to reduce volume (VOL-);
Short press (+<) to play the next song.
Long press (+<) to increase volume (VOL+).
3. Users can make the first connection by searching and pairing the product directly. If you need to connect the product to another mobile phone, please disconnect the current mobile phone first.

Bluetooth Handsfree

1. Answer a call; the product has reminder ring; short press (📞) to answer the call
2. Short press (📞) again to hang up.

Other Functions

AUX: Connect mini-jack cable to this AUX-input with your PC/laptop, AUX mode will be automatically activated once aux cable is plugged.

TF Card: TF mode plays MP3 file directly from the Micro SD Card. TF Mode will be activated automatically once Micro SD card is inserted into the TF slot.

USB Player: USB mode plays MP3 file directly from USB FLASH DRIVE USB Mode will be activated automatically once Micro SD card is inserted into the USB slot.

FM Radio: Radio Channel will be scanned automatically.
Short press + and - to switch between the radio channels.

LED Modes: Press mode button for 6-seconds to switch between 3 different LED modes.

Charging

Connect the cable with the charger (or the USB port on the computer), and insert the other end MICRO-USB to the speaker. When the speaker is charged, the red and blue indicator light in the middle of speaker will be in constant-on state. When it is fully charged, the indicator lights will still alive.

ENGLISH

BLASTER MINI

WIRELESS SPEAKER



Package Includes:

- 1x Blaster Mini
- 1x User Manual
- 1x Charging cable
- 1x Audio cable

Cautions

- (1) Please do not open the unit or replace any component, please follow the operations in user manual
- (2) Please do not operate the unit in the water or any other liquid, the unit is NOT water proof.
- (3) Please do not operate the unit if any water or liquid are being splashed into it, it may cause a fire or electrical shock
- (4) Please do not expose the product to heat source or fire directly
- (5) Please do not put the unit close to magnet field,

Specifications:

Bluetooth version: 3.0 +EDR
Battery capacity: 400mAh
Transmission distance: 10m
Rated Power: 3W
Play Time: 4-6 Hours
S/N: 80db

Warning

Do choose adapter from regular manufacturer.
Do charge the speaker if it will not be used for a long time (over 3 months)

NEDERLANDS

Bluetooth Connection

1. Turn ON/OFF Button to ON, speaker will enter into default bluetooth mode, the front LED light will flash. After the LED flashes quickly for 2 seconds, the products will enter pairing mode. Search for "iDance BM1 for pairing. After pairing, the LED light will flash slowly.
2. Press play/pause (⏮), the music is paused.
Short press (->) to play the previous song.
Long press (->) to reduce volume (VOL-);
Short press (+<) to play the next song.
Long press (+<) to increase volume (VOL+).
3. Users can make the first connection by searching and pairing the product directly. If you need to connect the product to another mobile phone, please disconnect the current mobile phone first.

Bluetooth Handsfree

1. Answer a call; the product has reminder ring; short press (📞) to answer the call
2. Short press (📞) again to hang up.

Other Functions

AUX: Connect mini-jack cable to this AUX-input with your PC/laptop, AUX mode will be automatically activated once aux cable is plugged.

TF Card: TF mode plays MP3 file directly from the Micro SD Card. TF Mode will be activated automatically once Micro SD card is inserted into the TF slot.

USB Player: USB mode plays MP3 file directly from USB FLASH DRIVE USB Mode will be activated automatically once Micro SD card is inserted into the USB slot.

FM Radio: Radio Channel will be scanned automatically.
Short press + and - to switch between the radio channels.

LED Modes: Press mode button for 6-seconds to switch between 3 different LED modes.

Charging

Connect the cable with the charger (or the USB port on the computer), and insert the other end MICRO-USB to the speaker. When the speaker is charged, the red and blue indicator light in the middle of speaker will be in constant-on state. When it is fully charged, the indicator lights will still alive.

NEDERLANDS



BLASTER MINI

WIRELESS SPEAKER



CONTENU:

- 1x Blaster Mini
- 1x manuel de l'utilisateur
- 1x chargeur câble
- 1x câble audio

Mise en garde

- (1) Ne pas ouvrir l'appareil ou remplacer des composants, suivre les instructions du manuel de l'utilisateur.
- (2) Ne pas faire fonctionner l'appareil dans l'eau ou dans un autre liquide, l'appareil n'est pas waterproof.
- (3) Ne pas faire fonctionner l'appareil près de l'eau, il pourrait être éclaboussé et peut causer un risque de choc électrique.
- (4) Ne pas exposer l'appareil à une source de chaleur.
- (5) Ne pas installer l'appareil près d'une source magnétique.

Specifications:





Bluetooth version: 3.0 +EDR
Battery capacity: 400mAh
Transmission distance: 10m
Rated Power: 3W
Play Time: 4-6 Hours
S/N: 80db

Avertissement



Choisir un adaptateur recommandé par le constructeur.

Ne charger l'enceinte si elle ne sera pas utilisée pendant une longue période (plus de trois mois).

Connexion Bluetooth

1. Allumé l'appareil, l'enceinte entre par défaut en mode Bluetooth, la LED en façade clignote, après que la LED clignote rapidement pendant 2 secondes, les produits entreront en mode d'appairage. Chercher « iDance BM1 » pour le jumelage. Après la liaison, la lumière LED clignote lentement.
2. Appuyez sur play/pause , le morceau passe en pause. Appui court pour le morceau suivant, appui long sur  pour baisser le volume ; Appui court  pour le morceau précédent, appui long  pour augmenter le volume.
3. Les utilisateurs peuvent faire la première connexion en cherchant et en jumelant le produit directement. Si vous devez connecter l'appareil à un autre téléphone mobile, veuillez déconnecter en premier le téléphone mobile qui est déjà connecté.

Bluetooth main libre

1. Répondre à un appel : Le produit a un appel : appuyez brièvement  pour répondre à l'appel.
2. Appui court  à nouveau pour raccrocher.

Autres fonctions

AUX: Connectez le câble mini-jack à l'entrée AUX avec votre PC/ordinateur portable, le mode AUX sera automatiquement activé lorsque le câble est branché.

TF Card: le mode TF lit les fichiers MP3 directement depuis la micro carte SD. Le mode TF sera automatiquement activé lorsque la micro SD carte est insérée dans le lecteur TF.

USB Player: le mode USB lit les fichiers MP3 directement depuis la clé USB. Le mode USB sera automatiquement activé lorsque la clé USB est insérée dans l'entrée USB.

FM Radio: en mode FM, la fréquence radio sera scannée automatiquement, appui court + et - pour permuter entre les fréquences radio.

LED Modes: Appuyez sur le bouton mode pendant 6 secondes pour permuter entre les 3 modes LED.

Charge

Connectez le câble avec le chargeur (ou le port USB de l'ordinateur), et insérez l'autre embout MICRO-USB dans l'enceinte. Lorsque l'enceinte est en charge, l'indicateur rouge et bleu situé au milieu de l'enceinte sera dans un état clignotant, et lorsqu'elle sera complètement chargée, l'indicateur de lumière s'allumera.