

DJ-202

Startup Guide

English

日本語

Deutsch

 
Français

Italiano

Español

Português

Nederlands

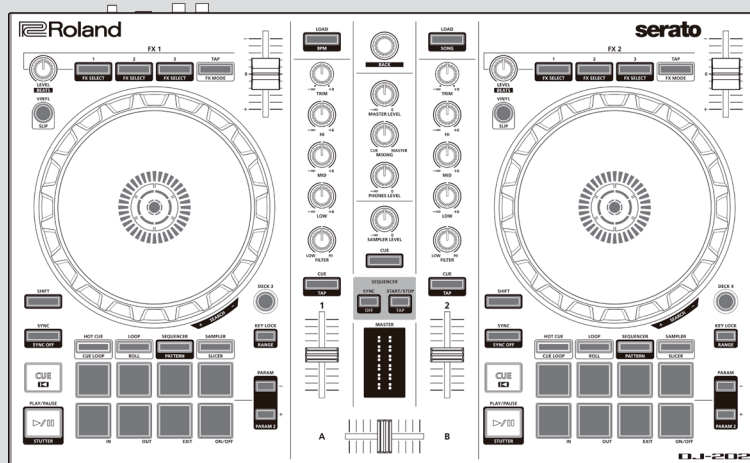

serato

serato  DJ INTRO

Before using this unit, carefully read "USING THE UNIT SAFELY" (p. 10) and "IMPORTANT NOTES" (p. 11). After reading, keep the document(s) where it will be available for immediate reference.

Copyright © 2017 ROLAND CORPORATION

Contents

Introduction	2	Using Serato DJ Intro.....	8
About This Document	2	Starting Serato DJ Intro	8
Check the Included Items	2	Basic Operations in Serato DJ Intro.....	8
Downloading the Owner's Manual	2	Importing a Song.....	8
		Loading a Song	8
		Playing a Song	9
		Monitoring Through Headphones	9
		Closing Serato DJ Intro.....	9
Installing the Software.....	3	USING THE UNIT SAFELY	10
System Requirements	3	IMPORTANT NOTES	11
Downloading the Software	3	Main Specifications	11
Downloading the DJ-202 USB Driver	3		
Downloading the Serato DJ Intro Software.....	3		
Installing the Software.....	3		
Mac OS Users	3		
Windows Users.....	3		
Panel Descriptions	4		
Browser Section	4		
Deck Section.....	5		
Mixer Section	6		
Front Panel	7		
Rear Panel (Connecting Your Equipment).....	7		

Introduction

About This Document

The Startup Guide (which we'll subsequently refer to as "this document") explains how to obtain the software that you'll need in order to use the DJ-202, how to make settings, and the names and functions of the parts.

Before you use the DJ-202, please read this document together with the owner's manual.
For details on how to obtain the owner's manual, refer to "Downloading the Owner's Manual" (p. 2).

Check the Included Items

The DJ-202 includes the following items. Please take a moment to confirm that all of these items have been included with the DJ-202. If you find that any item is missing, contact the nearest authorized Roland distributor in your country.

- Startup Guide (this document)
- USB cable

Downloading the Owner's Manual

The owner's manual is in PDF format. In order to read the owner's manual, you'll need a PDF reader installed on your computer.

Downloading the DJ-202 owner's manual

1. Start a browser and access the following Roland support webpage.
<http://www.roland.com/support/>
2. Search for "DJ-202."
3. From the owner's manuals, find "DJ-202 owner's manual" and click it.
4. Download the manual as directed by the screen.

Downloading the Serato DJ Intro owner's manual

1. Start a browser and access the following Serato DJ Intro webpage.
<https://serato.com/dj/downloads>
2. Click "Manuals and Downloads."
3. From "Manuals and Downloads," download the Serato DJ Intro owner's manual.

Installing the Software

System Requirements

Verify that your computer meets the system requirements before you proceed with installing the software.

	Mac OS	Windows
Operating System	macOS 10.12 OS X 10.11 OS X 10.10	Windows 10 Windows 8.1 Windows 7 SP1
CPU/Clock		Intel® Core™ i7/1.07 GHz Intel® Core™ i5/1.07 GHz Intel® Core™ i3/1.07 GHz
Screen Resolution		1280 x 720
Memory		4 GB
Free HDD Space		5 GB
USB		Available USB 2.0 port

* For the latest system requirements, refer to the Serato DJ Intro webpage.

Downloading the Software

The DJ-202 USB driver and Serato DJ Intro are not included in the package. Download them from the Roland or Serato website.

Downloading the DJ-202 USB Driver

The DJ-202 USB driver is software that outputs audio from your computer to the DJ-202.

Mac OS users

1. Start a browser and access the following Roland support webpage.
<http://www.roland.com/support/>
2. Search for "DJ-202."
3. In downloads, find "DJ-202 Driver for macOS / OS X" and click it.
4. Download the driver as directed by the screen.

Windows 10 users

1. Connect your internet-connected computer to the DJ-202's USB port.
2. Power-on the DJ-202.
3. Download the driver as directed by the screen.

Users of other than Windows 10

1. Start a browser and access the following Roland support webpage.
<http://www.roland.com/support/>
2. Search for "DJ-202."
3. In downloads, find "DJ-202 Driver for Windows **" and click it.
4. Download the driver as directed by the screen.

Downloading the Serato DJ Intro Software

1. Start a browser and access the following Serato DJ Intro webpage.
<https://serato.com/dj/intro/downloads>
2. Click "DOWNLOAD SERATO DJ INTRO."
3. Enter your email address, and click "CONTINUE."
4. Enter your password and country, and click "CONTINUE."
An email is sent to the address you specified.
5. Click "Download Serato DJ Intro" as directed by the email.
6. Follow the instructions as directed by the screen, then download the Serato DJ Intro.

Installing the Software

Install the software as follows.

Mac OS Users

1. Decompress the DJ-202 USB driver file that you downloaded.
2. Open the decompressed file, and double-click "DJ202_USBDriver.pkg."
The installer starts.
3. Install the software as directed by the screen.
4. Decompress the Serato DJ Intro software file that you downloaded.
5. Double-click the decompressed file.
The installer starts.
6. Read the license agreement, and if you accept the conditions, click [Agree].
7. When the following screen appears, drag and drop the [Serato DJ Intro] icon into the Applications folder.



This completes the installation.

Windows Users

 
1. Right-click the DJ-202 USB driver folder that you downloaded, and choose "Extract all."
The folder is decompressed.
2. Open the decompressed folder, and double-click "Setup.exe."
The installer starts.
3. Install the software as directed by the screen.
4. Right-click the Serato DJ Intro software folder that you downloaded, and choose "Extract all."
The folder is decompressed.
5. Double-click the decompressed file.
The installer starts.
6. Read the license agreement, and if you accept the conditions, choose [I agree to the license terms and conditions] and click [Install].
Installation begins.
7. When the following screen appears, click [Close].



This completes the installation.

Panel Descriptions


The top panel of the DJ-202 is divided into three sections by function: browser, deck, and mixer. Phones jack is located on the front side, and input/output jacks are located on the rear side. For details about each part, refer to the DJ-202 owner's manual and the Serato DJ Intro manual.

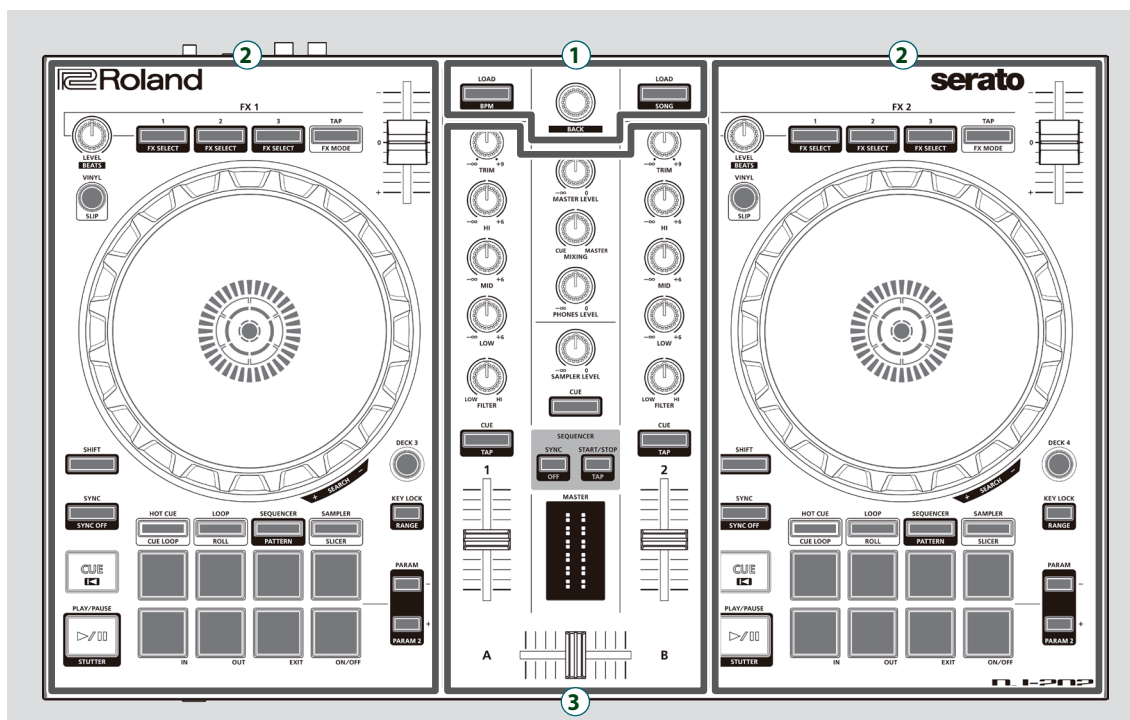

- ① Browser section
- ② Deck section
- ③ Mixer section

Browser Section

 Use these controls to operate Serato DJ Intro and load songs.

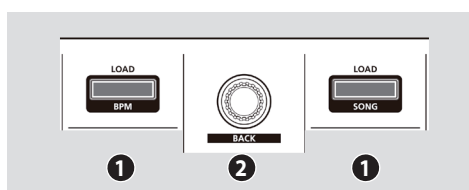

① [LOAD] buttons

Load a song selected on Serato DJ Intro into a deck.

[SHIFT] + [LOAD] Sorts the song library by SONG or BPM.

 
② Rotary selector

Turn this knob to move the cursor up/down. Press this knob to move the cursor to a lower level.

[SHIFT] + Press the knob Moves the cursor to a higher level.

Deck Section

The deck sections located at the left and right control four decks (left: decks 1 and 3, right: decks 2 and 4).

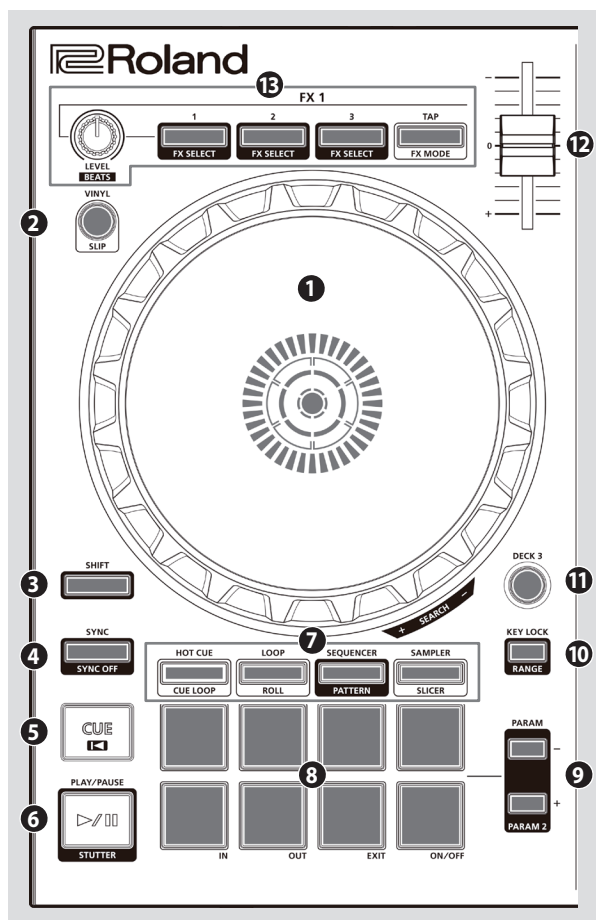**1 Jog dial**

Controls scratch and pitch bend (playback speed adjustment).

Rotate the top surface	Performs scratch if the VINYL mode is on, or performs pitch bend if the button is off.
Rotate the outer edge	Performs pitch bend.
[SHIFT] + rotate the top surface	Rapidly moves the playback location.

2 [VINYL] button

Turns VINYL mode on/off.

3 [SHIFT] button

You can recall other functions by holding down this button and pressing another button.

4 [SYNC] button

Automatically matches the tempo (pitch) of multiple songs.

[SHIFT] + [SYNC]	Cancels SYNC.
------------------	---------------

5 [CUE] button

Specifies, plays, or recalls a temporary cue point.

6 [▶/||] button

Plays or pauses the song.

[SHIFT] + [▶/]	Returns to the temporary cue point, and plays.
------------------	--

7 Pad Mode select

Here you can select the control mode of the performance pads.

[HOT CUE] button

Selects hot cue mode.

[LOOP] button

Selects loop mode.

[SEQUENCER] button

Selects sequencer mode.

[SHIFT] + [SEQUENCER]	Selects pattern mode. Switches the sequencer's pattern.
-----------------------	--

[SAMPLER] button

Selects sampler mode.

8 Performance pads

Use these pads to perform in the pad mode that you've selected.

9 PARAM area

Here you can specify the value of the parameter that's operated by the performance pads.

10 [KEY LOCK] button

Turns the key lock function on/off.

[SHIFT] + [KEY LOCK]	Specifies the variable range of the Tempo slider.
----------------------	---

11 [DECK 3], [DECK 4] buttons

Switch the deck (left: decks 1 and 3, right: decks 2 and 4) to be operated.

12 Tempo slider

Adjusts the playback speed of the song.

13 FX 1, FX 2 area

Here you can adjust the effects (FX 1: decks 1 and 3, FX 2: decks 2 and 4).

[LEVEL] knob

Adjust the character of the effect.

[SHIFT] + [LEVEL] knob	Adjusts the time for which the effect is applied.
------------------------	---

Effect buttons [1]–[3]

Turn the effect on/off.

[SHIFT] + Effect button	Changes the effect type.
-------------------------	--------------------------

 
[TAP] button

The interval at which you press this button (tap tempo) specifies the reference tempo of the effect.

If you long-press the button, the specified tempo is reset.

Mixer Section

This is a four-channel mixer. Here you can adjust the sound, connect sounds, and turn headphone cue on/off.

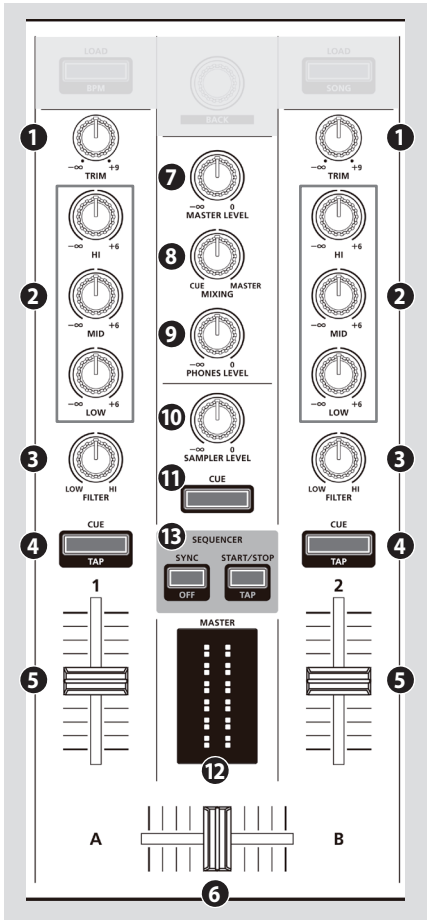

- 1

[TRIM] knobs
Adjust the volume.
- 2

[HI], [MID], [LOW] knobs
Boost/cut the volume of the high-frequency, mid-frequency, and low-frequency regions.
- 3

[FILTER] knobs
Applies a filter to each channel.
If you turn the [FILTER] knob toward the right, only the high-frequency range is heard.
If you turn the knob toward the left, only the low-frequency range is heard.
- 4

Channel [CUE] buttons
Turn cue on/off for each channel. The sound of channels whose [CUE] button is lit is output from the headphones.

[SHIFT] + [CUE]

You can specify the tempo of the track by the interval at which you repeatedly press the [CUE] button (Tap Tempo function).
- 5

Channel faders
Adjust the output level of each channel.
- 6

Cross fader
Switches between the audio output of the left and right decks.
- 7

[MASTER LEVEL] knob
Adjusts the master output level.
- 8

[MIXING] knob
Adjusts the volume balance of the channel whose Channel [CUE] button is lit and the master output for phones output.
- 9

[PHONES LEVEL] knob
Adjusts the volume of the headphones.
- 10

[SAMPLER LEVEL] knob
Adjusts SAMPLER output level.
- 11

SAMPLER [CUE] button
Turns SAMPLER output cue on/off.
- 12

MASTER level indicator
Indicates the master output level.
- 13

SEQUENCER area

[SYNC] button
Synchronizes the tempo of the sequencer to the tempo of Serato DJ Intro.

[SHIFT] + [SYNC]

Disables tempo synchronization.

 
[START/STOP] button
Plays/stops the pattern.

[SHIFT] + [START/STOP]

The interval at which you press this button (tap tempo) specifies the tempo of the sequencer.

Front Panel


Headphones

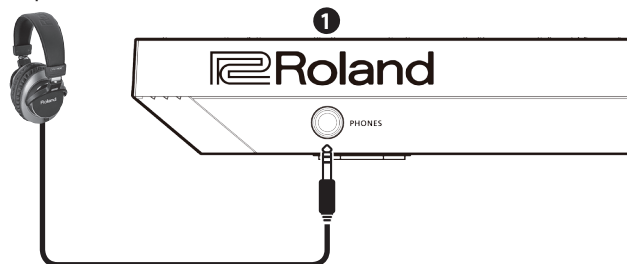**1 [PHONES] jacks**

Connect headphones here.

Rear Panel (Connecting Your Equipment)

 To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

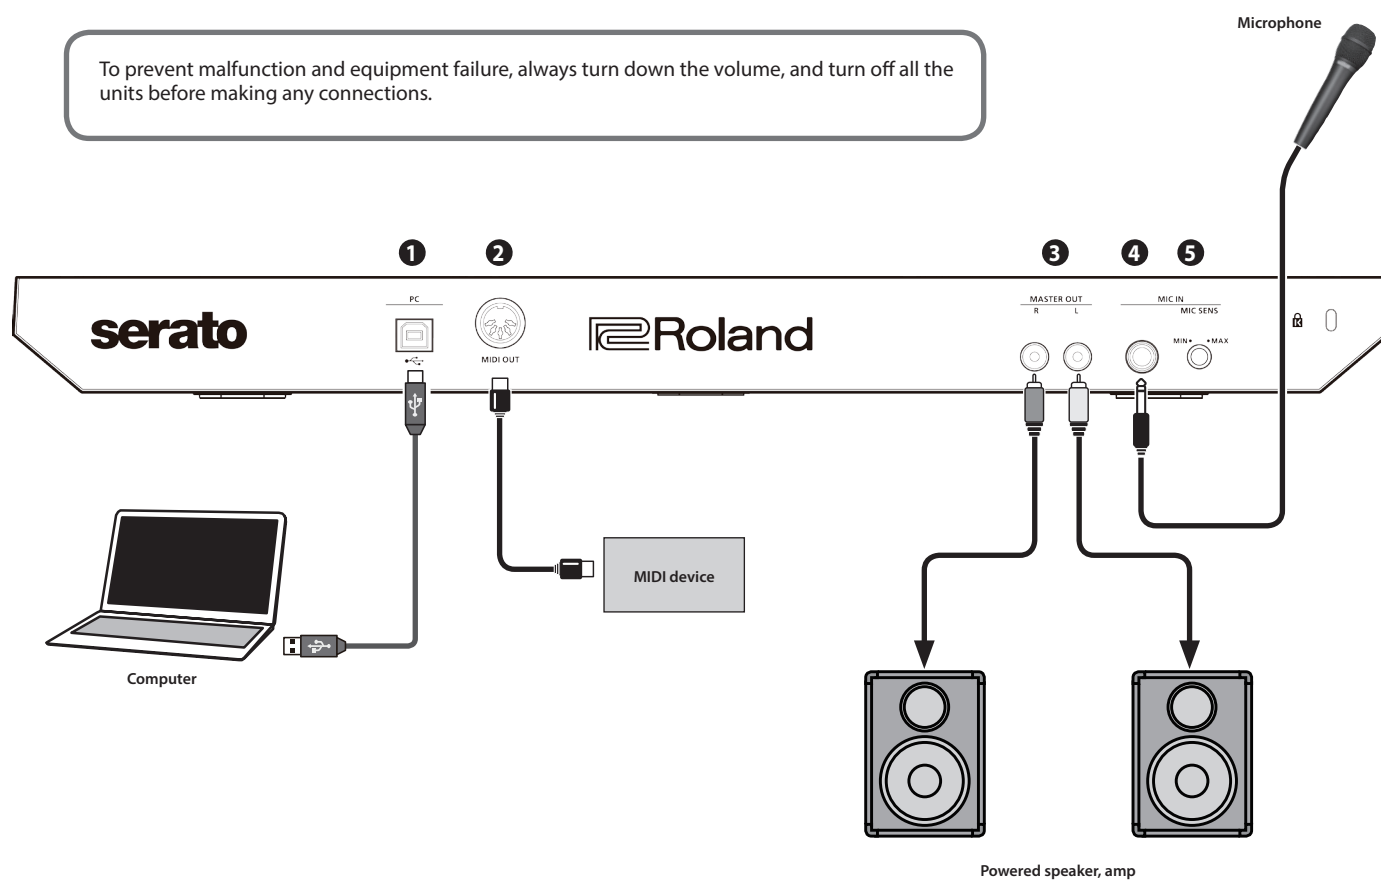**1 PC port**

Use the included USB cable to connect this port to your computer. When this is connected, power is supplied from the computer.

2 MIDI OUT connector

This outputs MIDI messages such as MIDI clock.

3 MASTER OUT L, R jacks

Connect your powered speakers or power amp here.

4 MIC IN jack

Connect your microphone here.

5 [MIC SENS] knob

Adjusts the mic input sensitivity.

English

日本語

Deutsch

Français

Italiano

Español

Português

Nederlands

Using Serato DJ Intro

This document explains basic use of Serato DJ Intro. For details on the functions and use of the software, refer to the Serato DJ Intro software manual.

Starting Serato DJ Intro

- * Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

1. Turn on the power of the computer.
2. Connect the DJ-202 (USB port) to the computer.
The power of the DJ-202 turns on.
3. Turn on the power of the equipment that's connected to the DJ-202.
4. Start Serato DJ Intro.

Mac OS

In the Finder, open the [Applications] folder and double-click the [Serato DJ Intro] icon.

Windows 7

In the [Start] menu, click [All Programs] → [Serato] → [Serato DJ Intro] → [Serato DJ Intro] icon.

Windows 8.1

In the [App View], click the [Serato DJ Intro] icon.

Windows 10

In the [Start] screen or [App View], click the [Serato DJ Intro] icon.

Basic Operations in Serato DJ Intro

Songs shown in the browser view can be imported into a deck area, and controlled from the DJ-202.



- 1 Deck section
- 4 Waveform panel
- 5 crate panel
- 6 Library

Importing a Song

Here we'll explain typical operations for importing a song.

- * Serato DJ Intro provides a variety of ways to import songs. For details, refer to the Serato DJ Intro software manual.
- * If you're using Serato Corporation's DJ software (Scratch Live, ITCH, Serato DJ) and you have already created a song library, the library you created can be used as-is.

1. In Serato DJ Intro, click the [Files] key.
The [Files] panel opens, and the files on your computer and on the peripheral devices connected to your computer are displayed.
2. In the [Files] panel, click the folder that contains the songs you want to add to the library.
3. Drag and drop the selected folder onto the crate panel.
A crate is created, and the songs are added to the library.

Loading a Song

Here's how to load a song so that it can be output.

1. On the DJ-202, hold down the [SHIFT] button and press the rotary selector to move the cursor to the crate panel.
2. Turn the DJ-202's rotary selector to move to the folder containing the song that you want to load; then press the rotary selector.
The cursor moves to the library.
3. Turn the rotary selector to move to the song that you want to load.
4. On the DJ-202, press the [LOAD] button of the deck into which you want to load the song.

Playing a Song

1. Set the DJ-202's knobs and switches as follows.

[MASTER LEVEL] knob	Turned all the way to the left
[TRIM] knobs	
[HI], [MID], [LOW] knobs	Center
[FILTER] knobs	
Channel faders	Lowest position

2. Press the [►/II] button to play back the loaded song.

3. Move the channel fader upward and turn the [TRIM] knob toward the right to adjust the volume.

Adjust the volume so that the channel level indicator is lit as far as the orange portion.

4. Turn the [MASTER LEVEL] knob toward the right to adjust the level of the speakers.

Monitoring Through Headphones

1. Set the DJ-202's knobs as follows.

[MIXING] knob	
[PHONES LEVEL] knob	Turned all the way to the left

2. Press the channel [CUE] button of the channel that you want to monitor.

3. Turn the [PHONES LEVEL] knob toward the right to adjust the headphone level.

Closing Serato DJ Intro

1. Close the Serato DJ Intro screen.

Mac OS

In the upper left of the Serato DJ Intro screen, click the [○] (red: close) button.

Windows

In the upper right of the Serato DJ Intro screen, click the [X] button.

A confirmation screen appears.

2. Click [Yes] to close Serato DJ Intro.

3. Turn off the power of the equipment that's connected to the DJ-202.

4. Turn off the power of the computer.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

WARNING

Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



Do not repair or replace parts by yourself

Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."



Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.



Do not place in an unstable location

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Avoid extended use at high volume

Use of the unit at high volume for extended periods of time may cause hearing loss. If you ever experience any hearing loss or ringing in the ears, you should immediately stop using the unit and consult a specialized physician.



Do not allow foreign objects or liquids to enter unit; never place containers with liquid on unit

Do not place containers containing liquid (e.g., flower vases) on this product. Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.



WARNING

Turn off the unit if an abnormality or malfunction occurs

Immediately turn the unit off, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" when:

- If smoke or unusual odor occurs; or
- Objects have fallen into, or liquid has been spilled onto the unit; or
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.



Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.



Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.



CAUTION

Route all power cords and cables in such a way as to prevent them from getting entangled

Injury could result if someone were to trip on a cable and cause the unit to fall or topple.



Avoid climbing on top of the unit, or placing heavy objects on it

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Disconnect all cords/cables before moving the unit

Damage or malfunction may result if you fail to disconnect all cables before moving the unit.



IMPORTANT NOTES

Placement

- This unit may interfere with radio and television reception. Do not use this unit in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.
- Do not place containers or anything else containing liquid on top of this unit. Also, whenever any liquid has been spilled on the surface of this unit, be sure to promptly wipe it away using a soft, dry cloth.

Maintenance

- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Repairs and Data

- Before sending the unit away for repairs, be sure to make a backup of the data stored within it; or you may prefer to write down the needed information. Although we will do our utmost to preserve the data stored in your unit when we carry out repairs, in some cases, such as when the memory section is physically damaged, restoration of the stored content may be impossible. Roland assumes no liability concerning the restoration of any stored content that has been lost.

Additional Precautions

- Any data stored within the unit can be lost as the result of equipment failure, incorrect operation, etc. To protect yourself against the irretrievable loss of data, try to make a habit of creating regular backups of the data you've stored in the unit.
- Roland assumes no liability concerning the restoration of any stored content that has been lost.
- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing others nearby, try to keep the unit's volume at reasonable levels.
- Continuous playing may cause dis-coloration of the pad, but this will not affect the pad's function.
- Do not use connection cables that contain a built-in resistor.

Intellectual Property Right

- It is forbidden by law to make an audio recording, video recording, copy or revision of a third party's copyrighted work (musical work, video work, broadcast, live performance, or other work), whether in whole or in part, and distribute, sell, lease, perform, or broadcast it without the permission of the copyright owner.
- Do not use this product for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this product.
- The copyright of content in this product (the sound waveform data, style data, accompaniment patterns, phrase data, audio loops and image data) is reserved by Roland Corporation.
- Purchasers of this product are permitted to utilize said content (except song data such as Demo Songs) for the creating, performing, recording and distributing original musical works.
- Purchasers of this product are NOT permitted to extract said content in original or modified form, for the purpose of distributing recorded medium of said content or making them available on a computer network.
- ASIO is a trademark and software of Steinberg Media Technologies GmbH.
- This product contains eParts integrated software platform of eSOL Co.,Ltd. eParts is a trademark of eSOL Co., Ltd. in Japan.
- Roland and SLICER are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

Main Specifications

Roland DJ-202: DJ Controller

Power supply	USB bus power
Current draw	500 mA
Dimensions	478 (W) x 297 (D) x 62 (H) mm 18-7/8 (W) x 18-7/8 (D) x 2-1/2 (H) inches
Weight	2.1 kg 4 lbs 11 oz
Accessories	Startup Guide USB cable

- * This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

English

日本語

Deutsch

Français

Italiano

Español

Português

Nederlands

