

1 2 3 4

9.4 CHASSIS SECTION

A


B

C

D

E

F

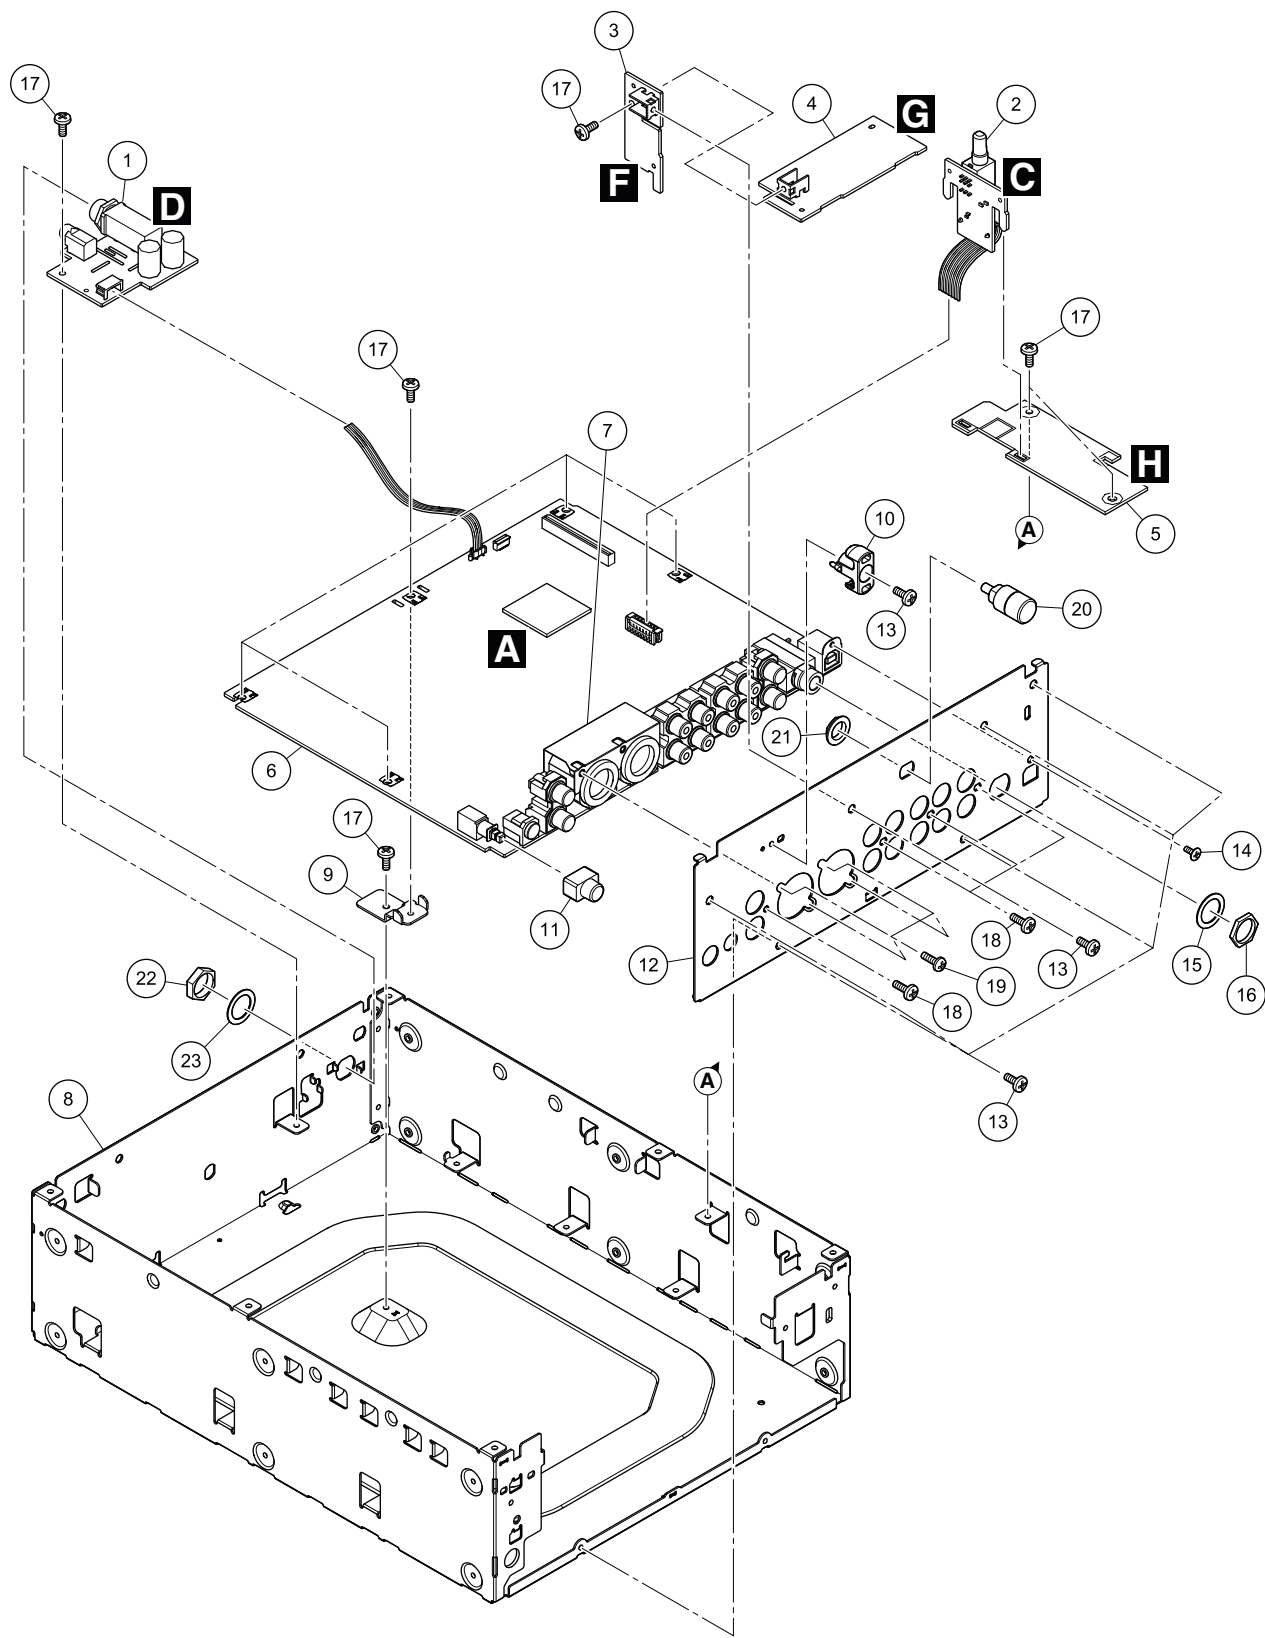

CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	HPJK ASSY	DWX3981	
2	TRIM ASSY	DWX3983	A
3	MPSH ASSY	DWX3988	
4	PPSH ASSY	DWX3989	
5	STAY ASSY	DWX3984	
6	MAIN ASSY	DWX4142	■
NSP 7	Canon Shield	DNF1789	
8	Chassis	DNA1462	
9	Stay	DNF2017	
10	Hook	DNK6067	
11	Knob	DNK6607	B
12	Rear Panel	DNC2135	
13	Screw	BBZ30P060FTB	
14	Screw (M3×5)	DBA1340	
15	Washer	DEC2920	■
16	Nut	NKX2FTC	
17	Screw	BBZ30P060FTC	
18	Screw	BPZ30P080FTB	
19	Screw	PPZ30P080FTB	
20	Earth Terminal	DKE1019	C
21	Flange Nut M9	DBN1008	
22	Nut	NKX2FTC	
23	Washer	DBE1017	■

			D
			■
			E
			■
			F