

Dual Loop Stereo (NML-3DLS)


Firmware Update Guide

26-04-29



- 1. The current version firmware of the Dual Loop Stereo (NML-3DLS) is V2.2.0. If you want to update it to the latest version, please check this document and do it step by step.
- 2. Press and hold the button & foot-switch as below, and then power it on. Then, the Dual Loop Stereo will start with “Device Firmware Update” on its screen.



- 3. Click on below link to download the NUX MIDI_DFU_Updater, and latest version firmware V2.2.0 of the Dual Loop Stereo.
<https://nuxaudio.com/product/dualloopstereo/#gallery>
- 4. Connect the Dual Loop Stereo with your Mac or Windows computer.

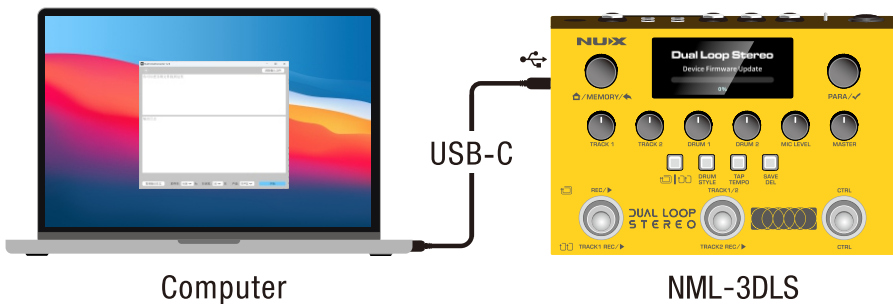

- 5. Open the NUX MIDI_DFU_Updater, and then you will see the updater as below. Then, step by step:
 - ① Please select “MIDI-DFU” for the “MIDI Device Out” & “MIDI Device In”.
 - ② Click on the “file...” to select the latest version firmware.
 - ③ Click on the “Start Update” to start the updating process.

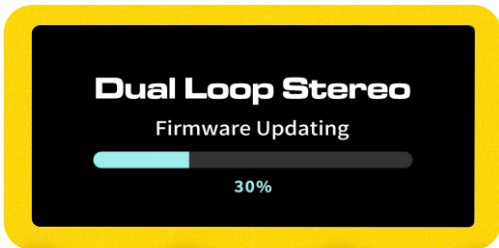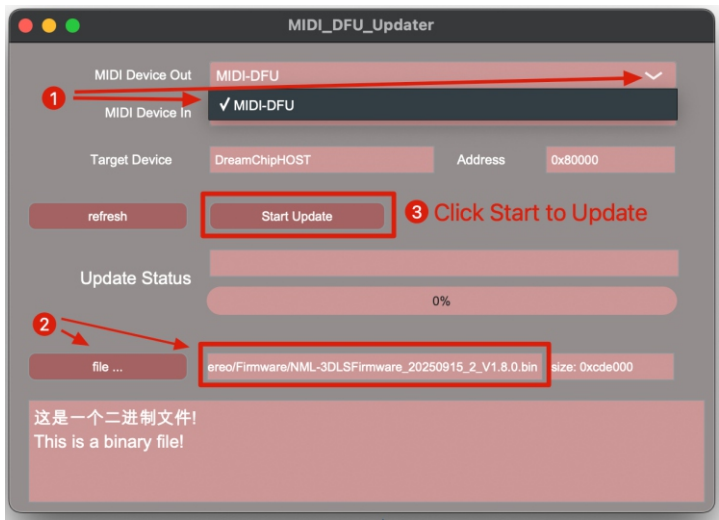

- 6. When the process of firmware updating is done, please unplug the adaptor to reboot the Dual Loop Stereo. Enjoy~!