



Scan the QR code for manual

 @KLOWRA\_PEDALS

 WWW.KLOWRA.COM

 SERVICE@KLOWRA.COM



KLOWRA

VERDICT

POLY OCTAVER  
EFFECT

- Publius Ovidius Naso

“Thus the world found its shape,  
not by war, but by measure.”

## HIDDEN PARAMETERS

**Detune ①**  
Adjust the detune amount of the octave effect

**RampATK ②**  
Ramp Attack Time

**RampRLS ③**  
Ramp Release Time

**-2 OCT ④**  
Adjust the -2 octave level as a ratio of -1 octave level


**Low Cut ⑤**  
Adjust the low-cut frequency for the octave effect

**Q ⑥**  
Adjust the resonance of the low-pass filter set by FREQ

**Effect OUT**  
Mono effect output

**Analog Dry OUT**  
Mono dry passthrough

**FOOTSWITCH**  
Control ON/OFF; Press&Hold to trigger specific functions

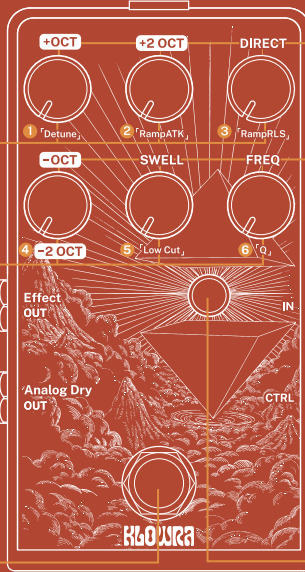

**+OCT**  
Adjust the level of the +1 octave effect

**+2 OCT**  
Adjust the level of the +2 octaves effect

**-OCT**  
Adjust the level of the -1 and -2 octaves effects

**DIRECT**  
Adjust the level of the dry signal

**SWELL**  
Adjust the attack time of the effect

**FREQ**  
Adjust the low-pass filter cutoff

**IN**  
Main mono input

**CTRL**  
Connecting expression pedal or external footswitch

**THE LED BUTTON**  
Lit when active, Press to switch between footswitch functions

## KLOWRA VERDICT POLY OCTAVE EFFECT

### Specific Functions

**\*Press&Hold the Footswitch\***

- **Freeze**  
Captures the current sound and sustains it like an organ hold pedal, forming a pad under your playing until you release it.
- **Ramp**  
Control the fading back and forth between the panel-set and the snap-set to create a dynamic effect. You can adjust the duration of the Ramp by modifying RampATK and RampRLS.

### Others

- **Envelope Fliter**  
Links the low-pass cutoff to the Swell envelope, so slow swells produce a matching filter sweep.
- **External Control**  
Use an external TS/TRS footswitch and expression pedal for multifunctional continuous control
- **Bypass Mode**  
Buffer Bypass (Freeze Trail on) or True Bypass (Freeze Trail off)
- **More Feature Selectable via Power Up Modes**  
Find more information at [www.klowra.com](http://www.klowra.com)

### Description of the LED Button

**About LED Color**

- White: The current footswitch specific function is Freeze.
- Blue: Freeze is being triggered
- Orange: The current footswitch specific function is Ramp
- Violet: Ramp is being triggered

### About Button Function

- **Switching of Specific Functions: Press**
- **Save Snap-set: Press&Hold**  
Save snap-set by Press&Hold the LED button  
\*Save successfully indicated by LED blinking violet\*
- **Adjustment of Hidden Parameters**  
Press&Hold, rotate the knob above the hidden parameters  
\*Adjustment successfully indicated by LED blinking yellow\*

ADAPTER : 9V  $\overline{\text{---}}$  250 mA    POLARITY :  $\oplus \ominus$   
Connect to 9V DC, center negative power supply, 250 mA minimum.

**NOTE:** If the power supply is insufficient, it may cause malfunction. We recommend isolated power supply for your daily operation.

